

SU780XLE Quick Guide:



Download Operator and Quick Guide manuals in the language of choice at: www.stirlingultracold.com/manuals

----- clip, laminate, keep with freezer -----

Initial Setup

1. Unpack freezer unit and included components, ensure all packaging material has been removed from around the fan inlet and outlet holes.
2. Adjust the leveling feet (wrench included) to secure the freezer in place.
3. Plug AC power cord into the main power socket at the back of the unit and then into an electrical outlet.
4. Switch AC power to the "On" position.
5. **Notice:** Ensure the access port stopper or sealant is in place. Remove factory tape at the port stopper prior to initial use.
6. Review the date, time and temperature set point within the Graphical User Interface and adjust as needed. Default set point is -80°C.

Guide to Basic Graphical User Interface Functions

ON / OFF	Switch the main power on, located at the back of the unit adjacent to the AC cord.
Change Set Point	Tap <i>Home</i> > <i>Set-up</i> > Enter PIN > <i>Enter</i> > Select Set Point Type > +/- > <i>Save</i>
Silence Alarm	Tap on-screen warning
Event Log	Tap <i>Home</i> > <i>Event Log</i> > use ^/v to view
Chart History	Tap <i>Home</i> > <i>Chart History</i> > Select Chart History Type > use </> to view

Guide to Advanced Graphical User Interface Functions

Alarm Setup	Tap <i>Home</i> > <i>Set-up</i> > Enter PIN > <i>Enter</i> > <i>Alarms</i> > Select Alarm Type > use +/- to adjust > <i>Save</i>
Date and Time	Tap <i>Home</i> > <i>Set-up</i> > Enter PIN > <i>Enter</i> > <i>Date / Time</i> > Select Date/Time component > use +/- to adjust > <i>Save</i>
Change PIN	Tap <i>Home</i> > <i>Set-up</i> > Enter PIN > <i>Enter</i> > <i>PIN</i> > Enter New PIN > <i>Enter</i> > Re-enter New PIN > <i>Enter</i>
Calibrate RTDs	Requires Authorized Service & PIN Tap <i>Home</i> > <i>Set-up</i> > <i>About</i> > <i>Service</i> > Enter Service PIN > <i>RTD Calibr.</i> > Select RTD > use +/- to adjust > <i>Save</i>

Handle Operation

The Stirling Ultracold handle is designed for one-handed operation. To open the freezer, rotate handle towards the user approximately 90°. To engage the Power-Release, apply firm downward pressure on the handle while in its open position. The Power-Release assists when the freezer door is adhered to the gasket after long periods of non-use as well as when air pressure is not yet equalized. To close, with handle in the horizontal position, push door to cabinet and return the handle to its original vertical position.

Caution:

Tipping Hazard

The unloaded freezer is TOP HEAVY. Use caution in moving and installation. Do not pitch the freezer more than 12 degrees from horizontal. Doing so may cause it to tip over.

Danger:

Flammable Refrigerant Used, Risk of Fire or Explosion:

SU780XLE uses 90 grams of R-170 (Ethane) in a hermetically sealed thermosiphon tubing. It requires caution in use/repair.

- A. Danger** – Do not drill or puncture inner liner.
- B. Danger** – To be repaired only by trained service personnel. Do not puncture refrigerant tubing.
- C. Caution** – Consult Repair Manual/Owner's Guide before attempting to service this product. All safety precautions must be followed.
- D. Caution** – Dispose of flammable refrigerant properly in accordance with federal or local regulations.
- E. Caution** – Follow handling instructions carefully.



**STIRLING
ULTRACOLD**

6000 Poston Road Athens, Ohio 45701, USA t: 740.274.7900 / 855.274.7900 f: 740.274.7901 www.stirlingultracold.com

©2020 Stirling Ultracold, Global Cooling, Inc. All Rights Reserved.
Global Cooling technology is manufactured under U.S. and International patents.
Specifications subject to change without notice. Refer to www.stirlingultracold.com for the latest specifications.