

# ULT25NEU QUICK GUIDE




clip, laminate, keep with freezer

## INITIAL SETUP

Port Stopper/Sealant	I	The Port Stopper/Sealant must be in place during operation
Power Indicator	A	The unit is ON when lit
Power ON	B	Press and hold for two beeps
Power OFF	B	Press and hold for three beeps
LCD Display	C	Displays chamber temperature
Display Setpoint	F	Press/Release to display current setpoint, S ## displayed
Return to Temp Display	F	Press/Release or wait eight seconds
Change Setpoint	F	Press and hold until Set T LED E glows, S ## displayed, then ^ or v D

## ADVANCED FUNCTIONS

Change to Preset	Press and hold Set F until Set T LED E glows, S ## displayed, then select Preset 1, 2 or 3 J
Postpone Over Temp Alarm	When Over Temp LED I glows, press Preset 3 J until time shows (1.0 h) (If Over Temp LED is not glowing, then Preset 3 acts as a Temp Preset)
Return to Temp Display	Wait eight seconds, press Preset 3 to return to temperature display
See Error Code Again	If Error LED H is glowing, press Preset 2 J briefly (If Error LED is not glowing, then Preset 2 becomes Temp Preset)
Lock Panel	Press and hold Preset 1 AND 2 AND 3 J until Locked LED G turns on (~five seconds)
Unlock Panel	Press and hold Preset 1 AND 2 AND 3 J until Locked LED G turns off (~five seconds)
LCD Display Codes	P ## – Preset Temp, ## h – Alarm Silenced, E ## – Error Code (see operating manual)

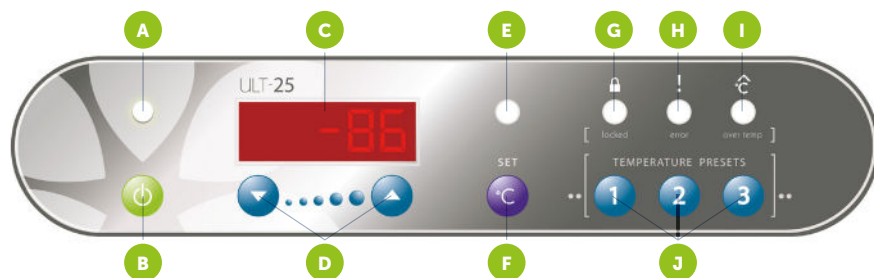

### NOTICE:

When unit is first turned on, red **Over Temp LED I** will be on until temperature is within 10° of setpoint.

Panel cannot be locked until temperature is within 10° of setpoint.

Stirling Ultracold 6000 Poston Road, Athens, Ohio 45701, USA

T 740.274.7900 / 1.855.274.7900 | F 740.274.7901 | [www.stirlingultracold.com](http://www.stirlingultracold.com)

©2024 Stirling Ultracold, Global Cooling, Inc. All Rights Reserved.

Global Cooling technology is manufactured under U.S. and International patents.  
Stirling Ultracold is a trademark of Global Cooling, Inc. Specifications subject to change without notice. Refer to [www.stirlingultracold.com](http://www.stirlingultracold.com) for the latest specifications.



Download Operator and Quick Guide manuals in the language of choice at:  
[stirlingultracold.com/manuals](http://stirlingultracold.com/manuals)